

产品

清单

产品外形

使用说明

养方法


见封

Product

.....

.....



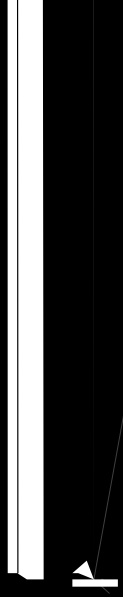

危险, 切勿让儿童使用。



危险, 切勿用手触摸纸张投入口或排出口的刀刃部分。
※ 机器内部有刀刃, 以免造成伤害。



勿将领带、项链、衣袖等卷入进纸口。
※ 如不慎卷入, 请按住“反转/REV”钮, 然后除去。



勿将头发等卷入进纸口。
※ 如不慎卷入, 请按住“反转/REV”钮, 然后除去。



勿将大头针、回形针等投入入纸口。
※ 如不慎卷入, 请按住“反转/REV”钮, 然后除去。

产品参数

电源	AC220V/50Hz
功率	
碎纸类型	段状
碎纸效果	2x7mm
碎纸能力 (70g, A4)	6张
碎纸速度	m/min
入纸口宽度	220mm
纸屑桶容量	23L
机器外形尺寸	370x235x545mm
噪音	≤ 70dB
机器净重	12kg
连续工作时间	≥ 10min

装箱清单

序号	名称	数量	备注
1	碎纸机	1台	
2	使用说明书	1份	
3	产品保修卡	1份	
4	合格证	1份	

产品外形结构



保养方法

1. 保养前，必须拔掉电源插头；
2. 保养维护只限机器外部零件的清理；
3. 清洁外部时，注意不要让水滴滴入机器中。

常见故障分析及排除


No.9901 Instruction Manual

Thank you for purchasing No.9901 cross cut paper shredder,the advanced functions and design of which mostly suit your office. We are confident that the shredder will make a major contribution to destroy used documents and ensure the confidentiality of sensitive materials.

To help you correctly use the shredder and prevent you and others from suffering hazards and property losses,please read t

Useage attention

Product Outlook & Names

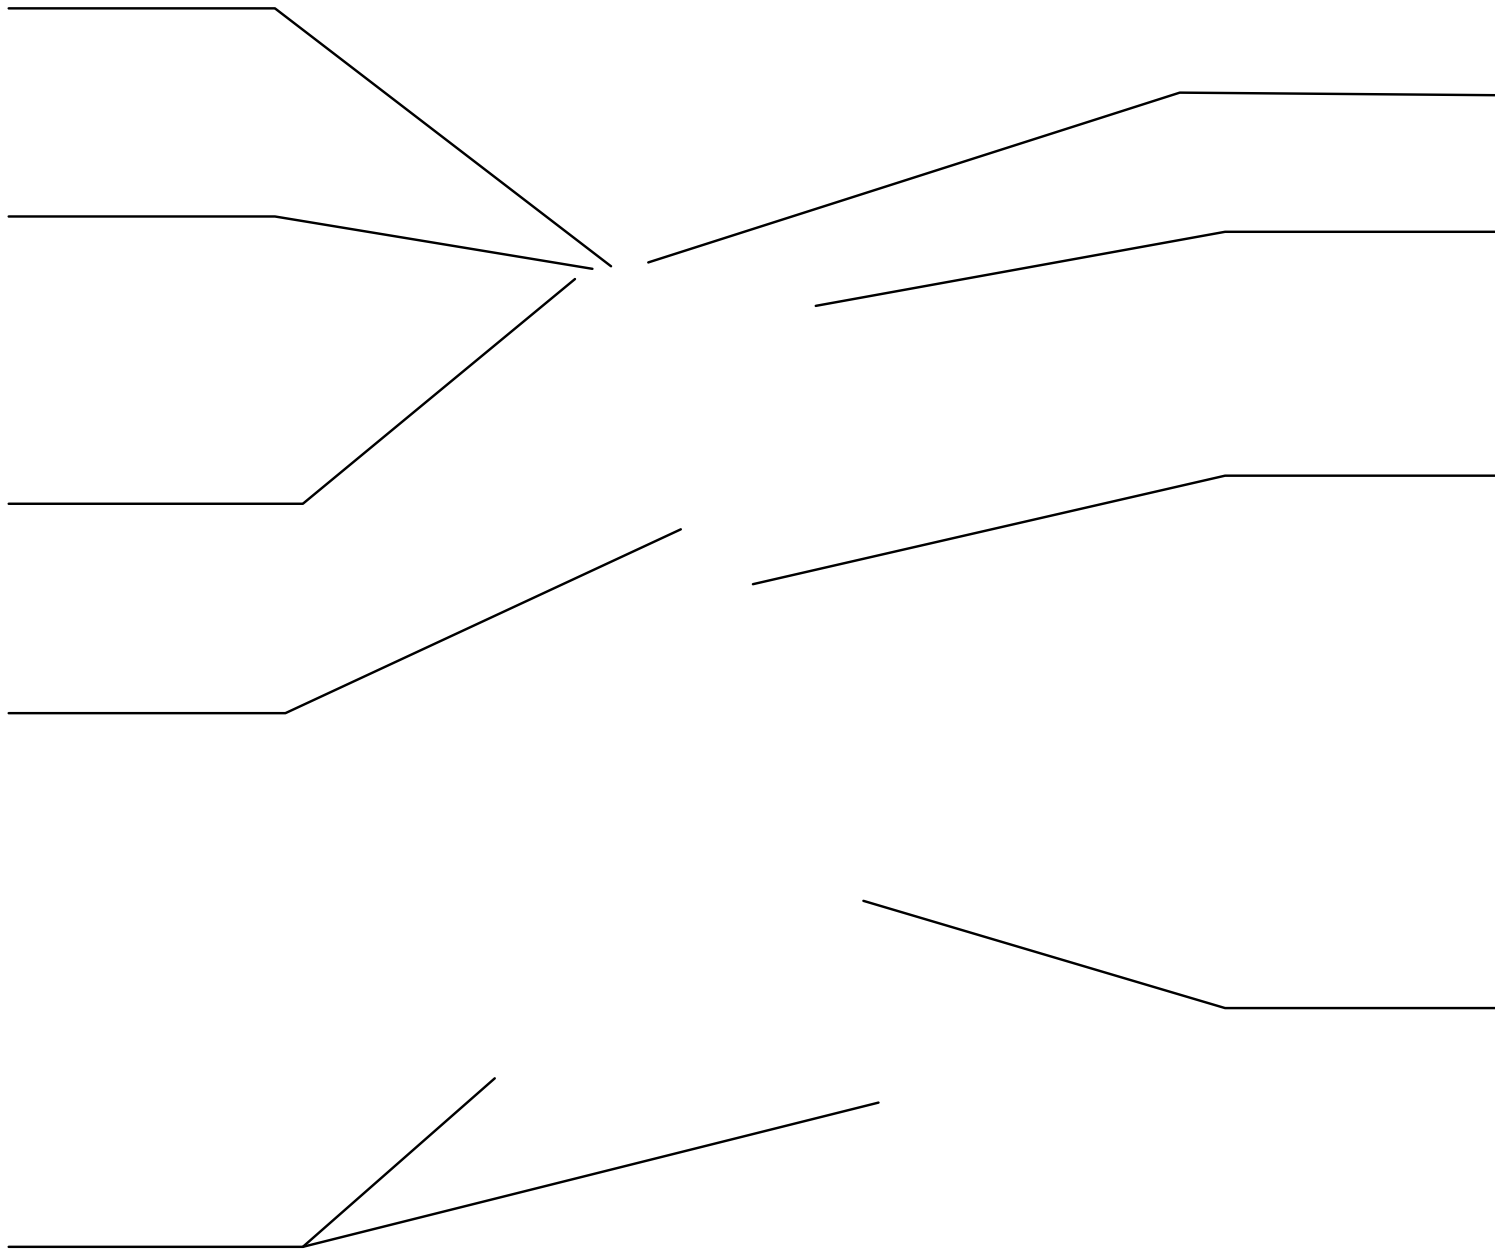

Operating Procedures

3. When you want to stop the operation of shredding paper, yo



Trouble Analyysi



得力集团有限公司